



LEMUR USAGE PRECAUTIONS

WWW.JAZZMUTANT.COM

Location

Using the unit in the following locations can result in a malfunction.

- In direct sunlight
- Locations of extreme temperature and humidity
- Excessively dusty or dirty locations
- Locations of excessive vibration
- Close to magnetic fields

Power supply

Please only use the supplied AC/DC adapter and never try to connect any other outlet in the power plug behind the unit.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios, televisions and cell phones.

Handling

To avoid breakage, do not apply excessive force to the switches, screen and connectors. Do not bend or twist excessively the unit to avoid screen or touchscreen damage.

Care

If the unit becomes dirty, wipe it with a clean, dry cloth. Do not use corrosive liquid or flammable polishes.

Keep this manual

After reading this manual, please keep it for later reference.

Keeping foreign matter out of your equipment

Never set any container with liquid in it near the equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock.

Be careful not to let metal objects get into the equipment. If something does slip into the equipment, unplug the AC adapter from the wall outlet. Then contact your nearest dealer or retailer where the equipment was purchased.